

ARG Series Raw Water Strainers

Installation and Maintenance

Installation: Recommended installation is vertically oriented and above the waterline. Sizes smaller than 1-1/2" have an upper bracket which is fastened to a sturdy surface. Hang the strainer in the upper bracket to mark the position of the lower bracket (about 1" above the drain plug). Remove the strainer from the upper bracket to drill the holes for the lower bracket. The lower bracket is mounted open-side up. Hang the strainer in the upper bracket (the sight glass is resting against the lower bracket). Run the releasable strap around the sight glass (be sure to engage the lower bracket), and pull hand-tight.



ARG-P SERIES with Non-Metallic Filter Basket

Sizes 1-1/2" and larger do not have a separate upper bracket. Bolt through the cast-in bracket and into a bulkhead or stringer. Install the lower bracket in the same manner as described above.


Bonding: Strainers have 2 #10 bonding screws on the strainer head. Use the screw most convenient for connection to the boat bonding system. Warning: Do not make the strainer bonding connection in series with motorized equipment, as specified by ABYC, E-11, Figure-18.

Maintenance: Inspect and clean the basket frequently (the addition of GROCO SSA will tell you when to clean all of your strainers - call GROCO for details). Clean the sight glass with mild soapy water. Do not use chemical cleaners.

Replace the cap and tighten hand-tight only. GROCO SW-2531 is offered to break loose a stuck cap, but is not intended for cap tightening. Hand-tight is sufficient for the O-Ring seals.

Lubricate the Cap O-Rings and threads annually with silicon or Teflon based grease to make future maintenance easier.

SERVICE NOTE: When replacing the sight glass tighten the bolts to 25 in-lb maximum torque.

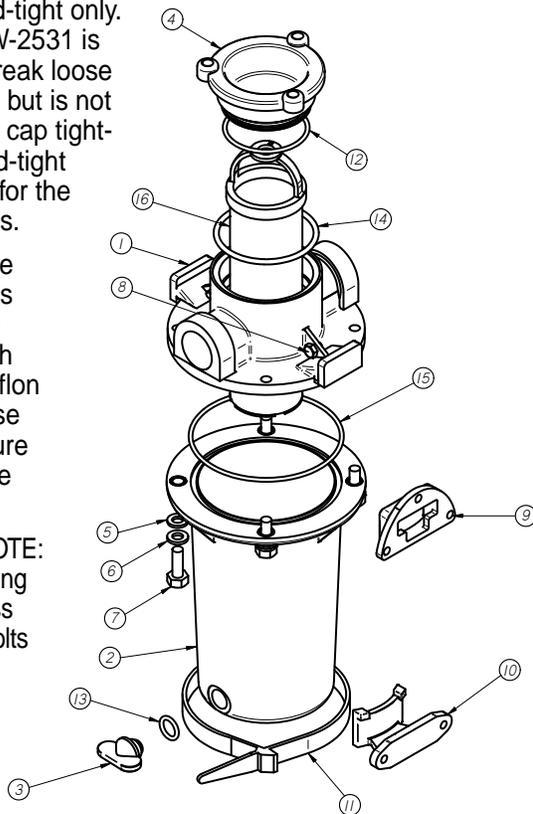

ITEM NO	NAME	IN SVC KIT	QTY	ARG-500	ARG-750	ARG-1000	ARG-1250	IN SVC KIT	QTY	ARG-1500	ARG-2015	ARG-2000	ARG-2515	ARG-2520	ARG-2500	ARG-3015	ARG-3020	ARG-3025	ARG-3000
1	Head Casting	ARG-510-H	1	ARG-760-H	ARG-1010-H	ARG-1260-H	ARG-1260-H	1	ARG-1510-H	ARG-2010-H	ARG-2010-H	ARG-2010-H	ARG-2510-H	ARG-2510-H	ARG-3010-H	ARG-3010-H	ARG-3010-H	ARG-3010-H	ARG-3010-H
2	Sight Glass	ARG-503	1	ARG-753	ARG-1003	ARG-1003	ARG-1253	1	ARG-1503	ARG-2003	ARG-2003	ARG-2003	ARG-2503	ARG-2503	ARG-3003	ARG-3003	ARG-3003	ARG-3003	ARG-3003
3	Drain Plug W/O-RING	ARG-756	1	ARG-756	ARG-756	ARG-756	ARG-756	1	ARG-756										
4	Drain Plug W/O-RING before 080101	ARG-506	1	ARG-506	ARG-506	ARG-506	ARG-506	1	ARG-506										
4	Cap, Plastic	ARG-501-PC	1	ARG-501-PC	ARG-501-PC	ARG-501-PC	ARG-501-PC	1	ARG-501-PC										
4	Cap, Bronze, before 010901	ARG-501-B	1	ARG-501-B	ARG-501-B	ARG-501-B	ARG-501-B	1	ARG-501-B										
4	Cap, Bronze, after 010901	ARG-501-C	1	ARG-501-C	ARG-501-C	ARG-501-C	ARG-501-C	1	ARG-501-C										
5	Washer	ARG-1	1	ARG-505	ARG-505	ARG-505	ARG-505	1	ARG-505										
6	Washer	ARG-1	4	ARG-504	ARG-504	ARG-504	ARG-504	1	ARG-504										
7	Hex Bolt	ARG-1	4	ARG-502	ARG-502	ARG-502	ARG-502	1	ARG-502										
8	Hex Bolt	ARG-1	2	ARG-505	ARG-505	ARG-505	ARG-505	1	ARG-505										
9	Bracket, Upper	ARG-1	1	ARG-504	ARG-504	ARG-504	ARG-504	1	ARG-504										
10	Bracket, Lower	ARG-1	1	ARG-502	ARG-502	ARG-502	ARG-502	1	ARG-502										
11	Strap	ARG-1	1	ARG-502	ARG-502	ARG-502	ARG-502	1	ARG-502										
12	O-Ring	ARG-1	1	ARG-502	ARG-502	ARG-502	ARG-502	1	ARG-502										
13	O-Ring	ARG-1	1	ARG-502	ARG-502	ARG-502	ARG-502	1	ARG-502										
13	O-Ring before 080101	ARG-1	1	ARG-502	ARG-502	ARG-502	ARG-502	1	ARG-502										
14	O-Ring	ARG-1	1	ARG-502	ARG-502	ARG-502	ARG-502	1	ARG-502										
15	O-Ring	ARG-1	1	ARG-502	ARG-502	ARG-502	ARG-502	1	ARG-502										
16	Basket, Polyethylene	ARG-1	1	ARG-502	ARG-502	ARG-502	ARG-502	1	ARG-502										
16	Basket, #304-SS	ARG-1	1	ARG-502	ARG-502	ARG-502	ARG-502	1	ARG-502										
16	Basket, Monel	ARG-1	1	ARG-502	ARG-502	ARG-502	ARG-502	1	ARG-502										